



MikroTik User Meeting in Peru

Migración de Red Inalámbrica a CAPsMan.

Por: Maximiliano Dobladez
MKE Solutions



Lima, Perú. Febrero 2016.



Presentación Personal

- ✓ Nombre: Maximiliano Dobladez
- ✓ CEO - MKE Solutions
- ✓ Experiencia con MikroTik RouterOS desde 1999
- ✓ Consultor y Entrenador **MikroTik**
- ✓  - info@mkesolutions.net
- ✓  - @mdobladez
- ✓  - mdobladez

Presentación de la Empresa

Capacitaciones Oficiales

- ✓ *Entrenamientos Privados*
- ✓ *Entrenamientos Públicos*
- ✓ *Academy Coordinator Latam*

Soporte

- ✓ *Incidencias*
- ✓ *Soporte Mensual (OutSourcing)*

Desarrollo

- ✓ *Desarrollo de Proyectos*
- ✓ *Soluciones llave en mano*

Ventas

- ✓ *Hardware*
- ✓ *Licencias RouterOS*



www.mkesolutions.net



info@mkesolutions.net



[@mkesolutions](https://twitter.com/mkesolutions)



[/mkesolutions](https://facebook.com/mkesolutions)

Presentación de la Empresa



Academia[®]

DE ENTRENAMIENTOS

Mis Cursos

Inscribirse a un entrenamiento

MTCNA Rio Cuarto, Argentina

Info

CONFIRMADO

MTCNA Rio Cuarto, Argentina

Info

CERRADO

Conceptos Iniciales

Dificultad



Introducción al cálculo de redes (subnetting)

Cómo realizar el subneteo en IPv4, Cálculo binario y decimal de máscaras y hosts.

Inicial



Modelo OSI

El modelo OSI, introducción y necesidad del mismo. Descripción de las 7 capas. Relación Modelo OSI y TCP/IP.

Intermedia



DHCP-Option Calculator

Calculadora para obtener el dhcp-option en HEX de un network y gateway

Intermedia



IPv6 para operadores de Red.

Libro que nos enseña como implementar IPv6 en redes de carriers, BGP de tránsito. Ejemplos de configuraciones

Alta



Burst Simulator

Herramienta para simular una descarga y graficar la ráfaga del Burst con los parámetros ingresados.

Intermedia



MTCUME


MikroTik 18

2016-02-15 | Lima, Peru |

Entrenamiento Oficial MikroTik el 15 de Febrero de 2016 en la ciudad de Lima, Peru. Duración: 2 días.

Mas Info

Inscribirse

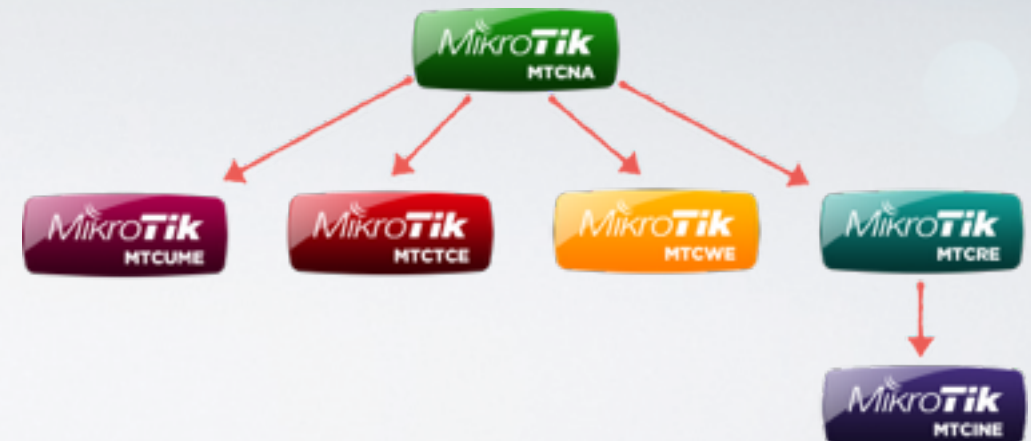

<http://consultores.mkesolutions.net>

<http://www.AcademiaDeEntrenamientos.com>

Presentación de la Empresa



REDES SPECTRUM

ESCENARIO

ESCENARIO

Situación inicial

- ✓ Brindar conectividad inalámbrica al campus universitario
- ✓ Dos redes wireless **Profesor** (encriptada) y **Alumnos** (libre)
- ✓ Redes independientes y no se pueden ver mutuamente
- ✓ Acceso a las redes por VLANs diferentes
- ✓ Internet libre pero controlado para **Alumnos**
- ✓ Acceso a SIAL (Sistema de Alumnos) para **Profesores**



ESCENARIO

Propuesta Original


- ✓ Realizar una red MESH dual con varios APs para cubrir la zona solicitada
- ✓ Crear dos redes inalámbricas a través de AP Virtuales
- ✓ Posibilidad de brindar roaming entre APs
- ✓ Niveles de seguridad básicos



ESCENARIO


Diseño de la red original

- ✓ MESH basada en **WDS + RSTP**
- ✓ MESH Dual - *5Ghz Backbone - 2Ghz Acceso*
- ✓ Canales diferentes para evitar traslape (red acceso)
- ✓ Trabaja en Capa 2 (OSI)
- ✓ RSTP para evitar bucles y convergencia ante cambios
- ✓ Lista de acceso para limitar niveles de señal inalámbrica

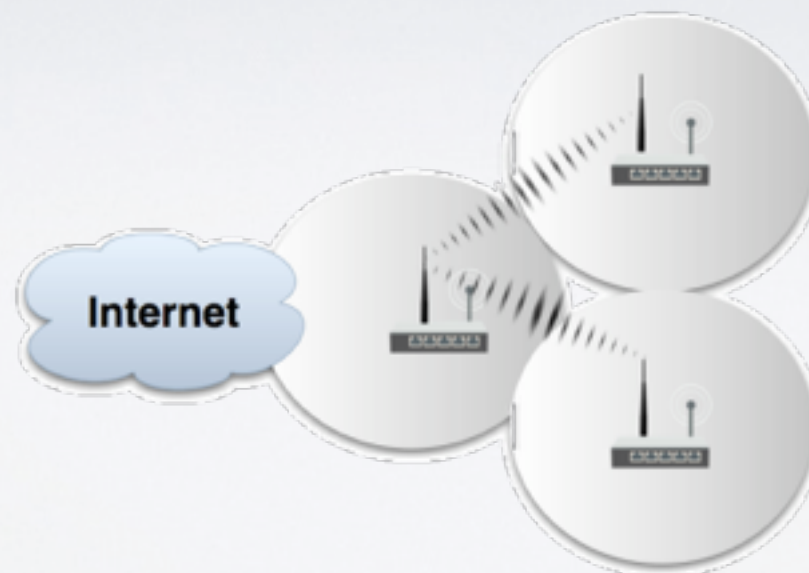

REDES MESH

Diseño de la red

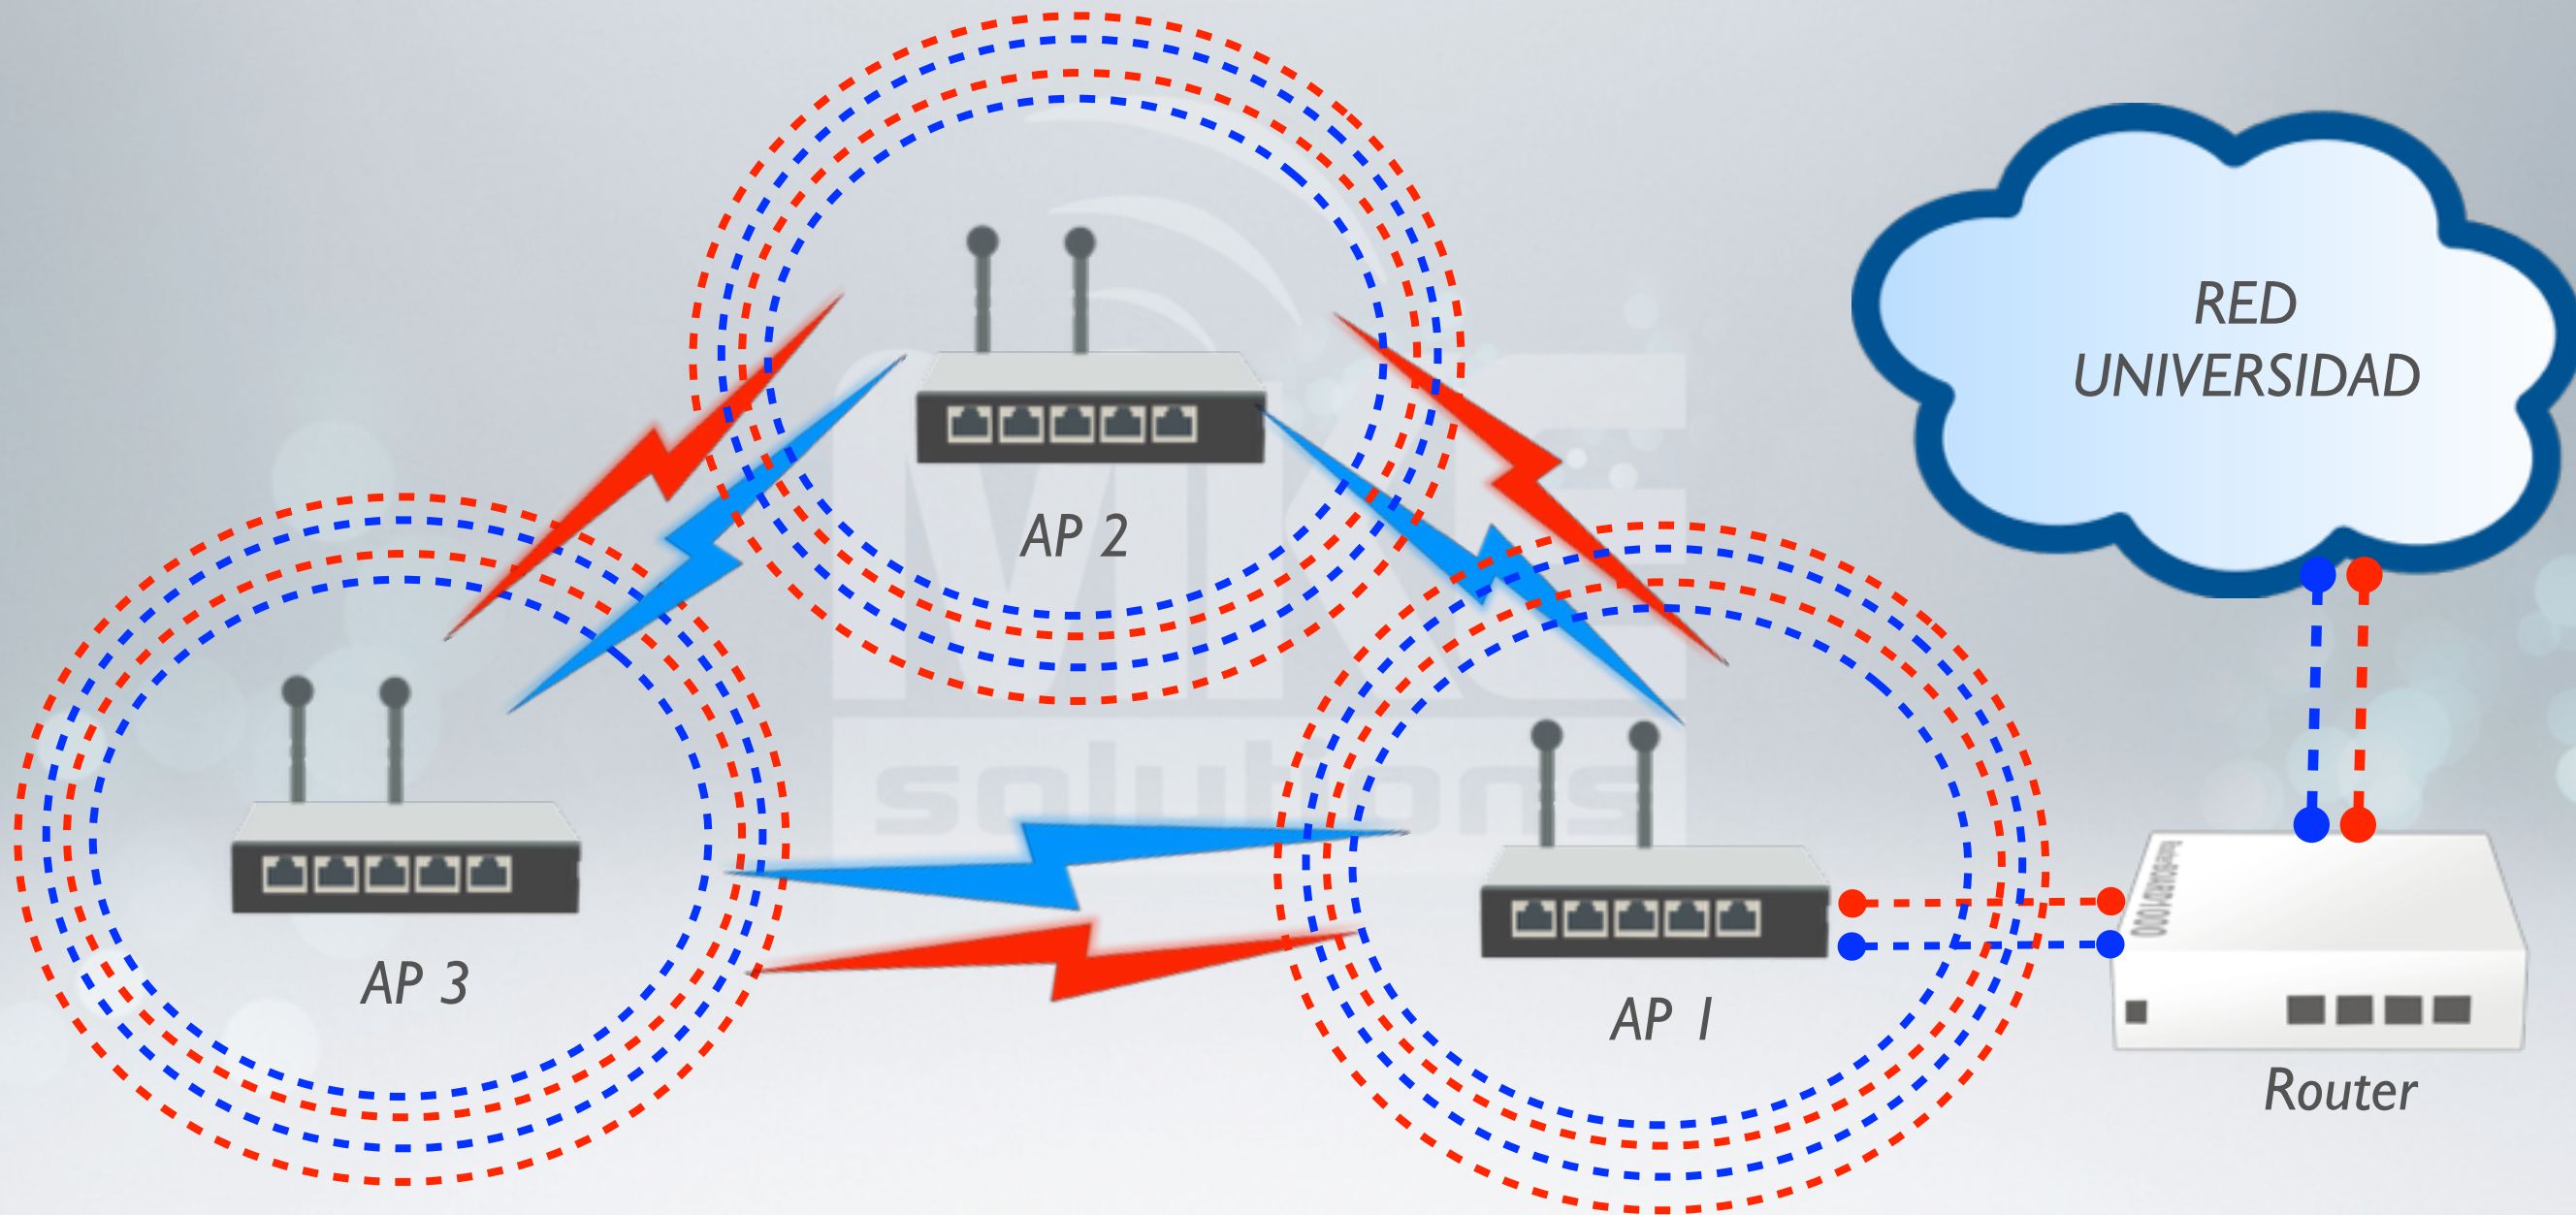

5Ghz - Backbone



2Ghz - Profesores
Alumnos



Vlan Profesores




Vlan Alumnos


MIGRACION A CAPSMAN

CAPsMAN

- ✓ Administración centralizada
- ✓ Comunicación por **MAC** e **IP**.
- ✓ Aprovisionamiento de APs
- ✓ Soporta AP Virtuales
- ✓ Soporta modo *local forwarding* / *CAPsMAN forwarding*

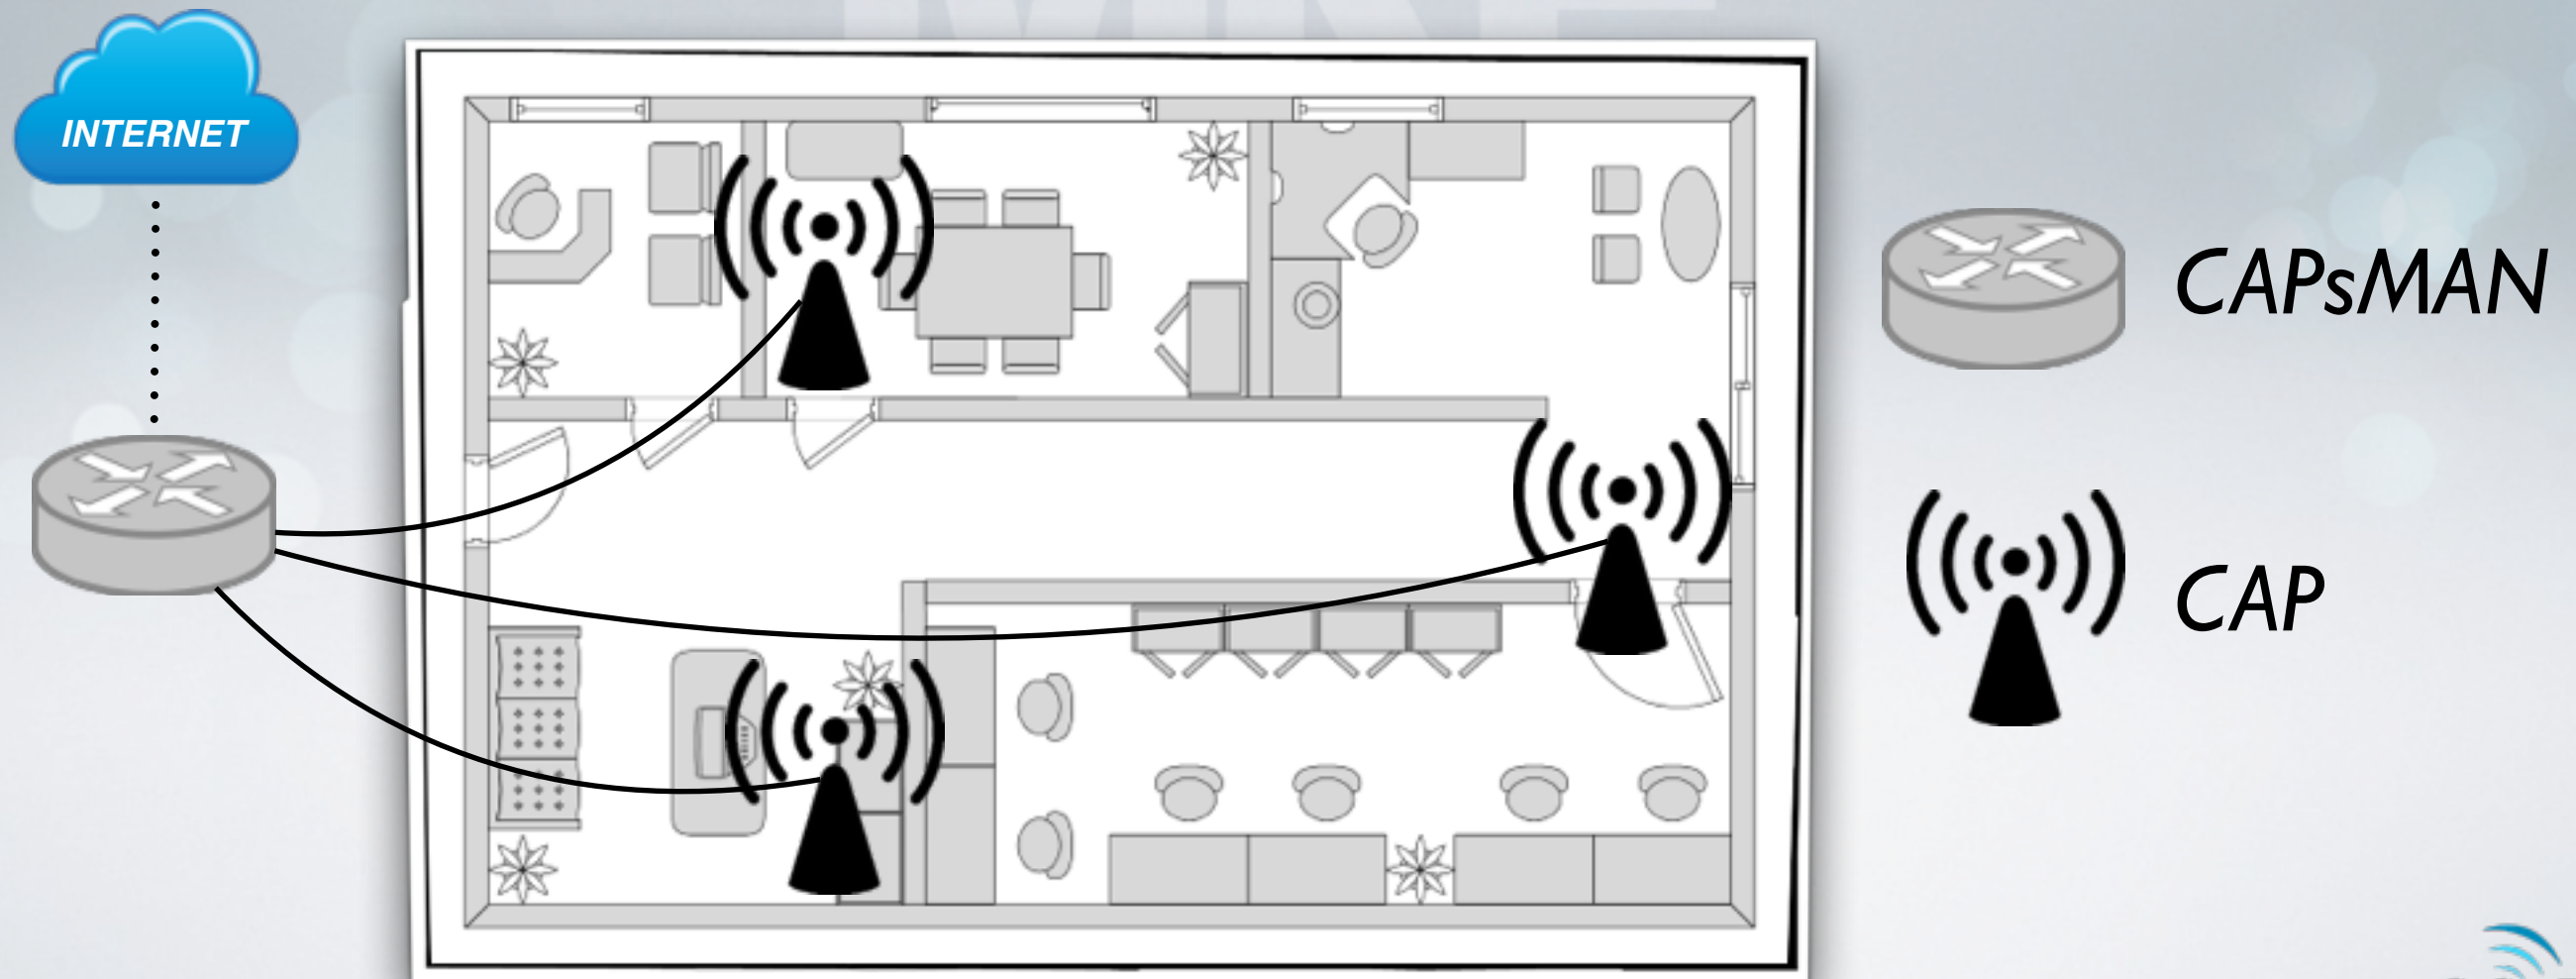


CAPsMAN

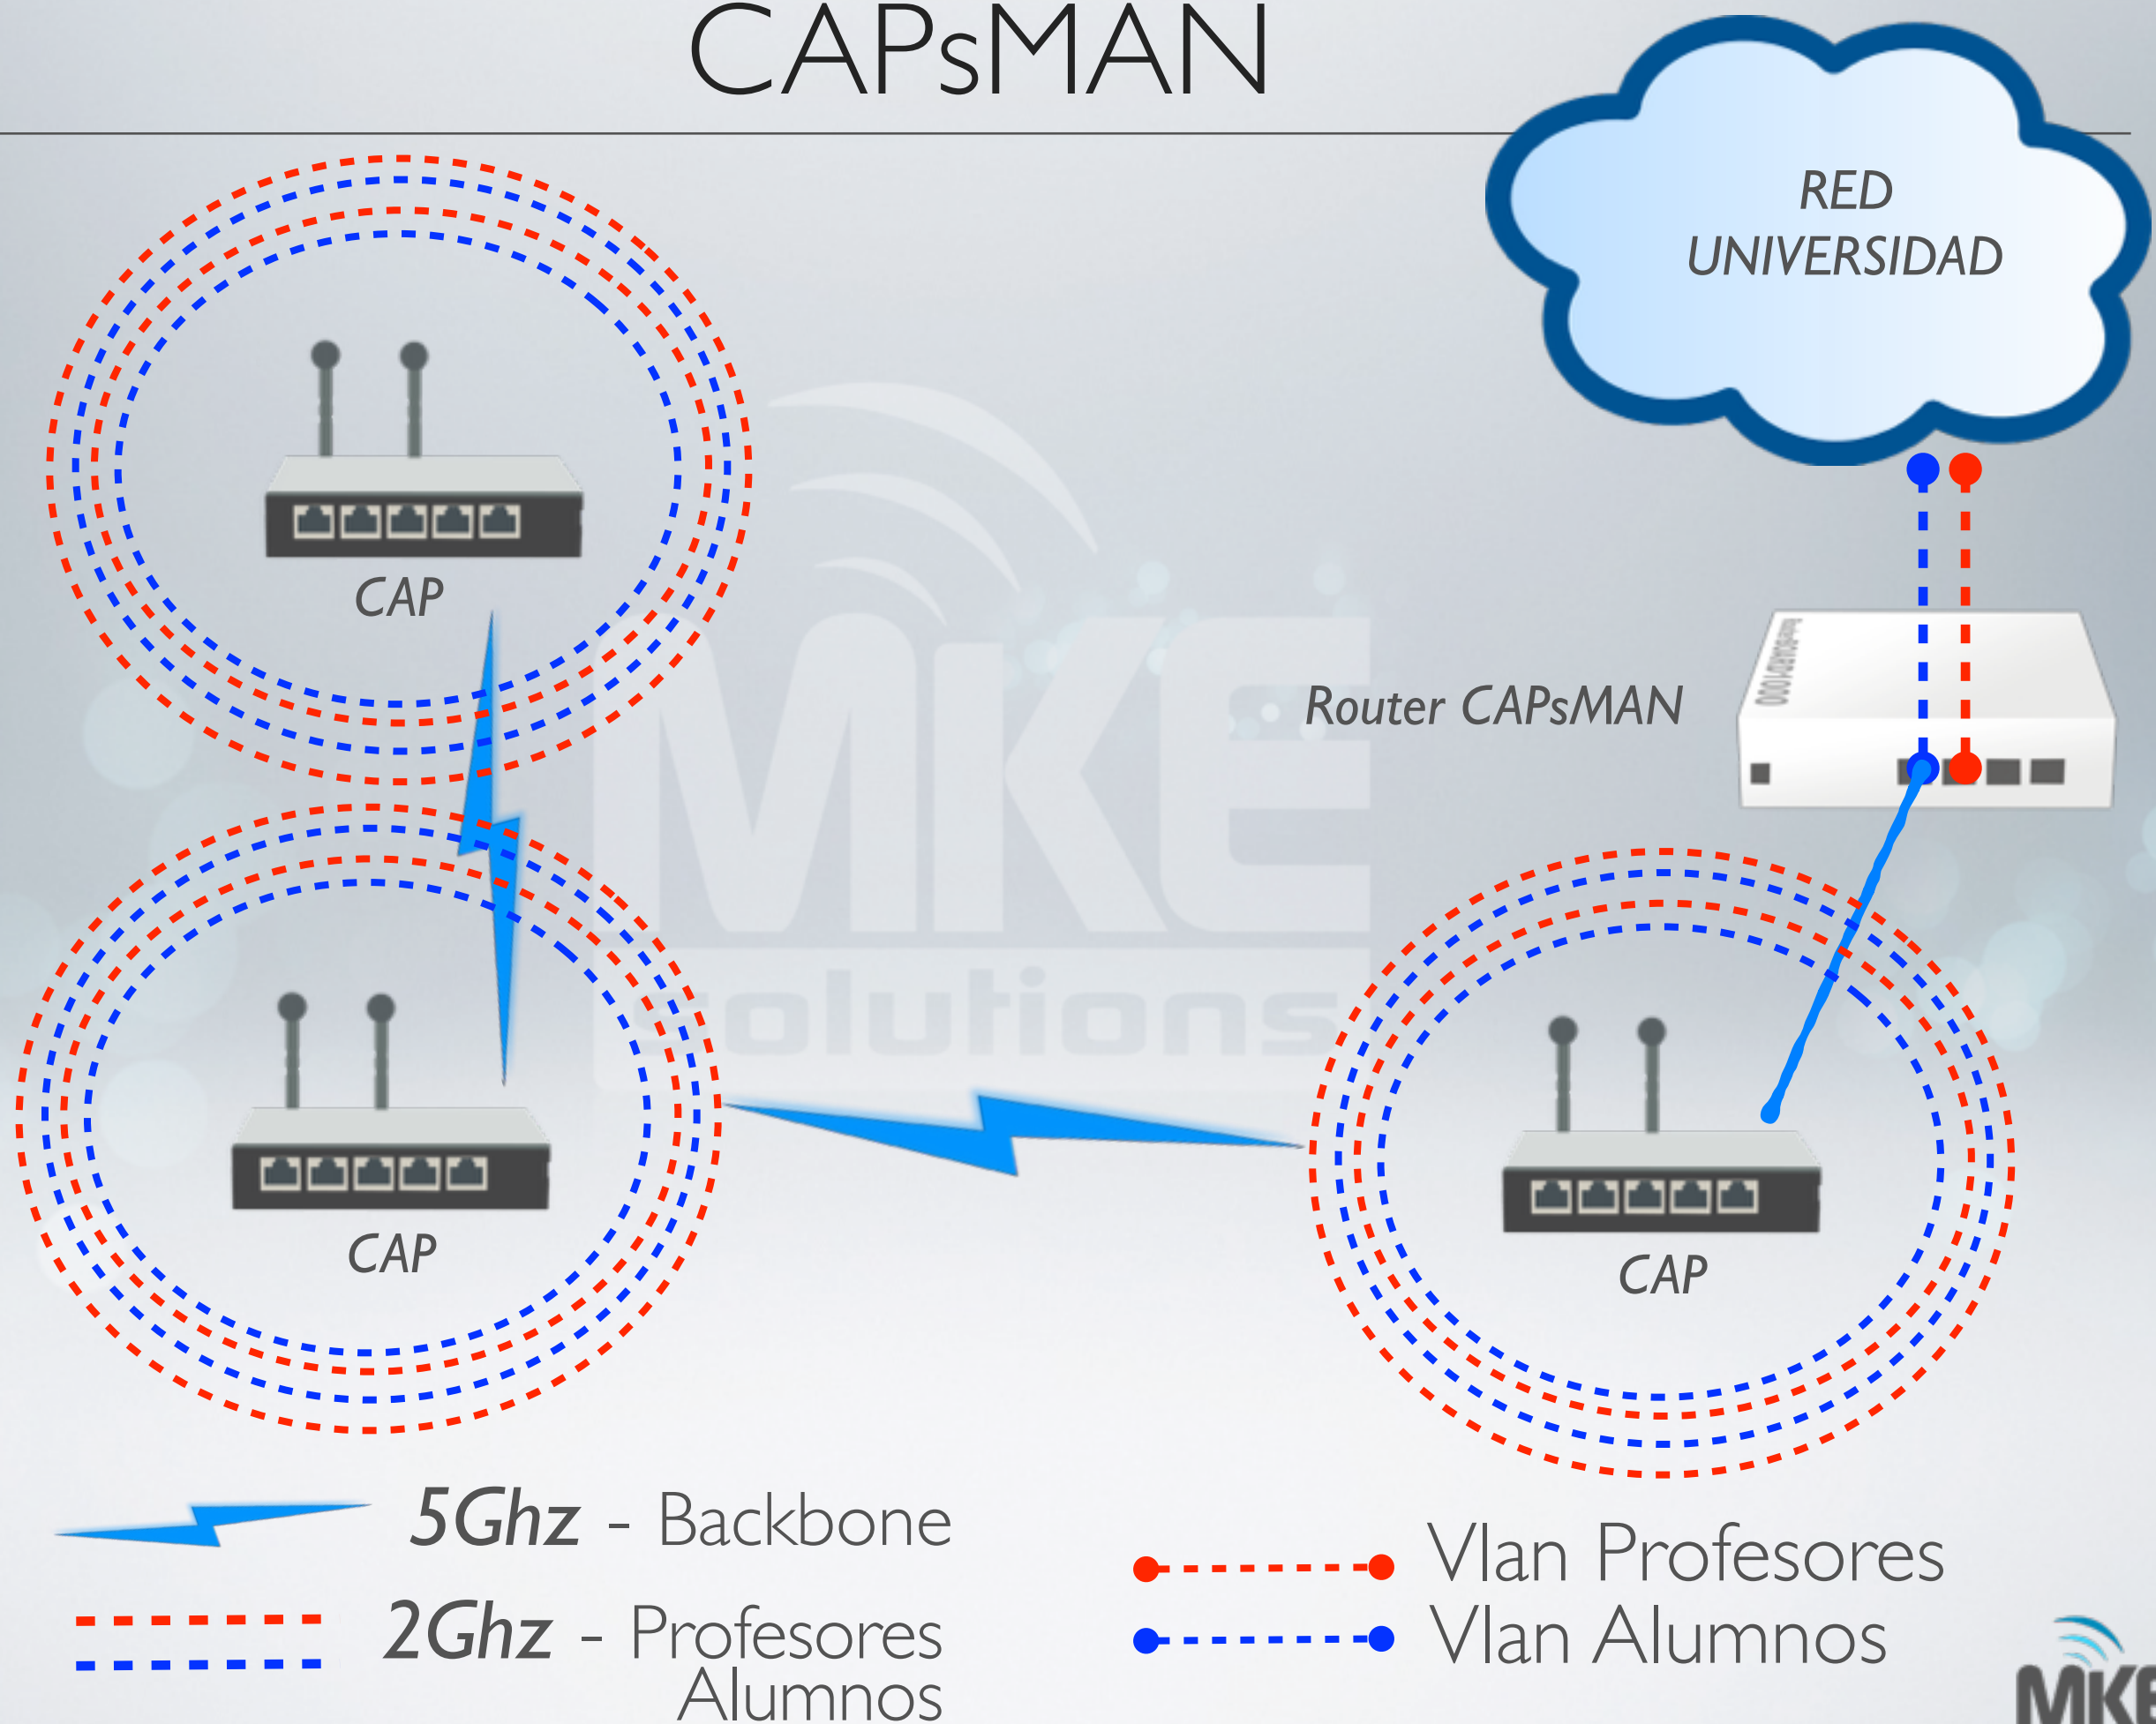

CAPsMAN

Implementación de CAPsMAN


- ✓ Crear 2 Bridges (Profesores y Alumnos)
- ✓ Crear red de Backbone en 5Ghz
- ✓ Activar CAPsMAN en router central
- ✓ Configurar el Aprovisionamiento
- ✓ Configurar los CAPs y registrar al CAPsMAN
- ✓ Chequear la configuración

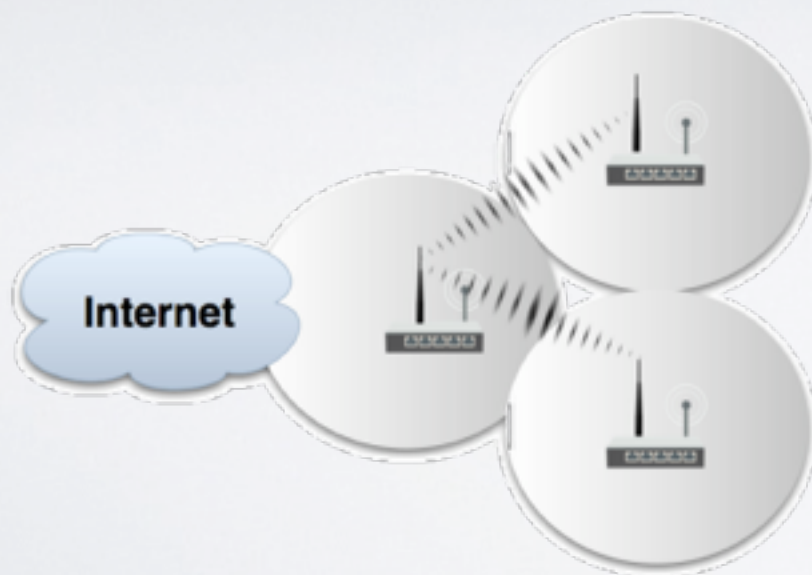

CONFIGURACION

CONFIGURACION CAPsMAN

- ✓ Bridge *Profesores y Alumnos*
- ✓ Bridge *BackBone*

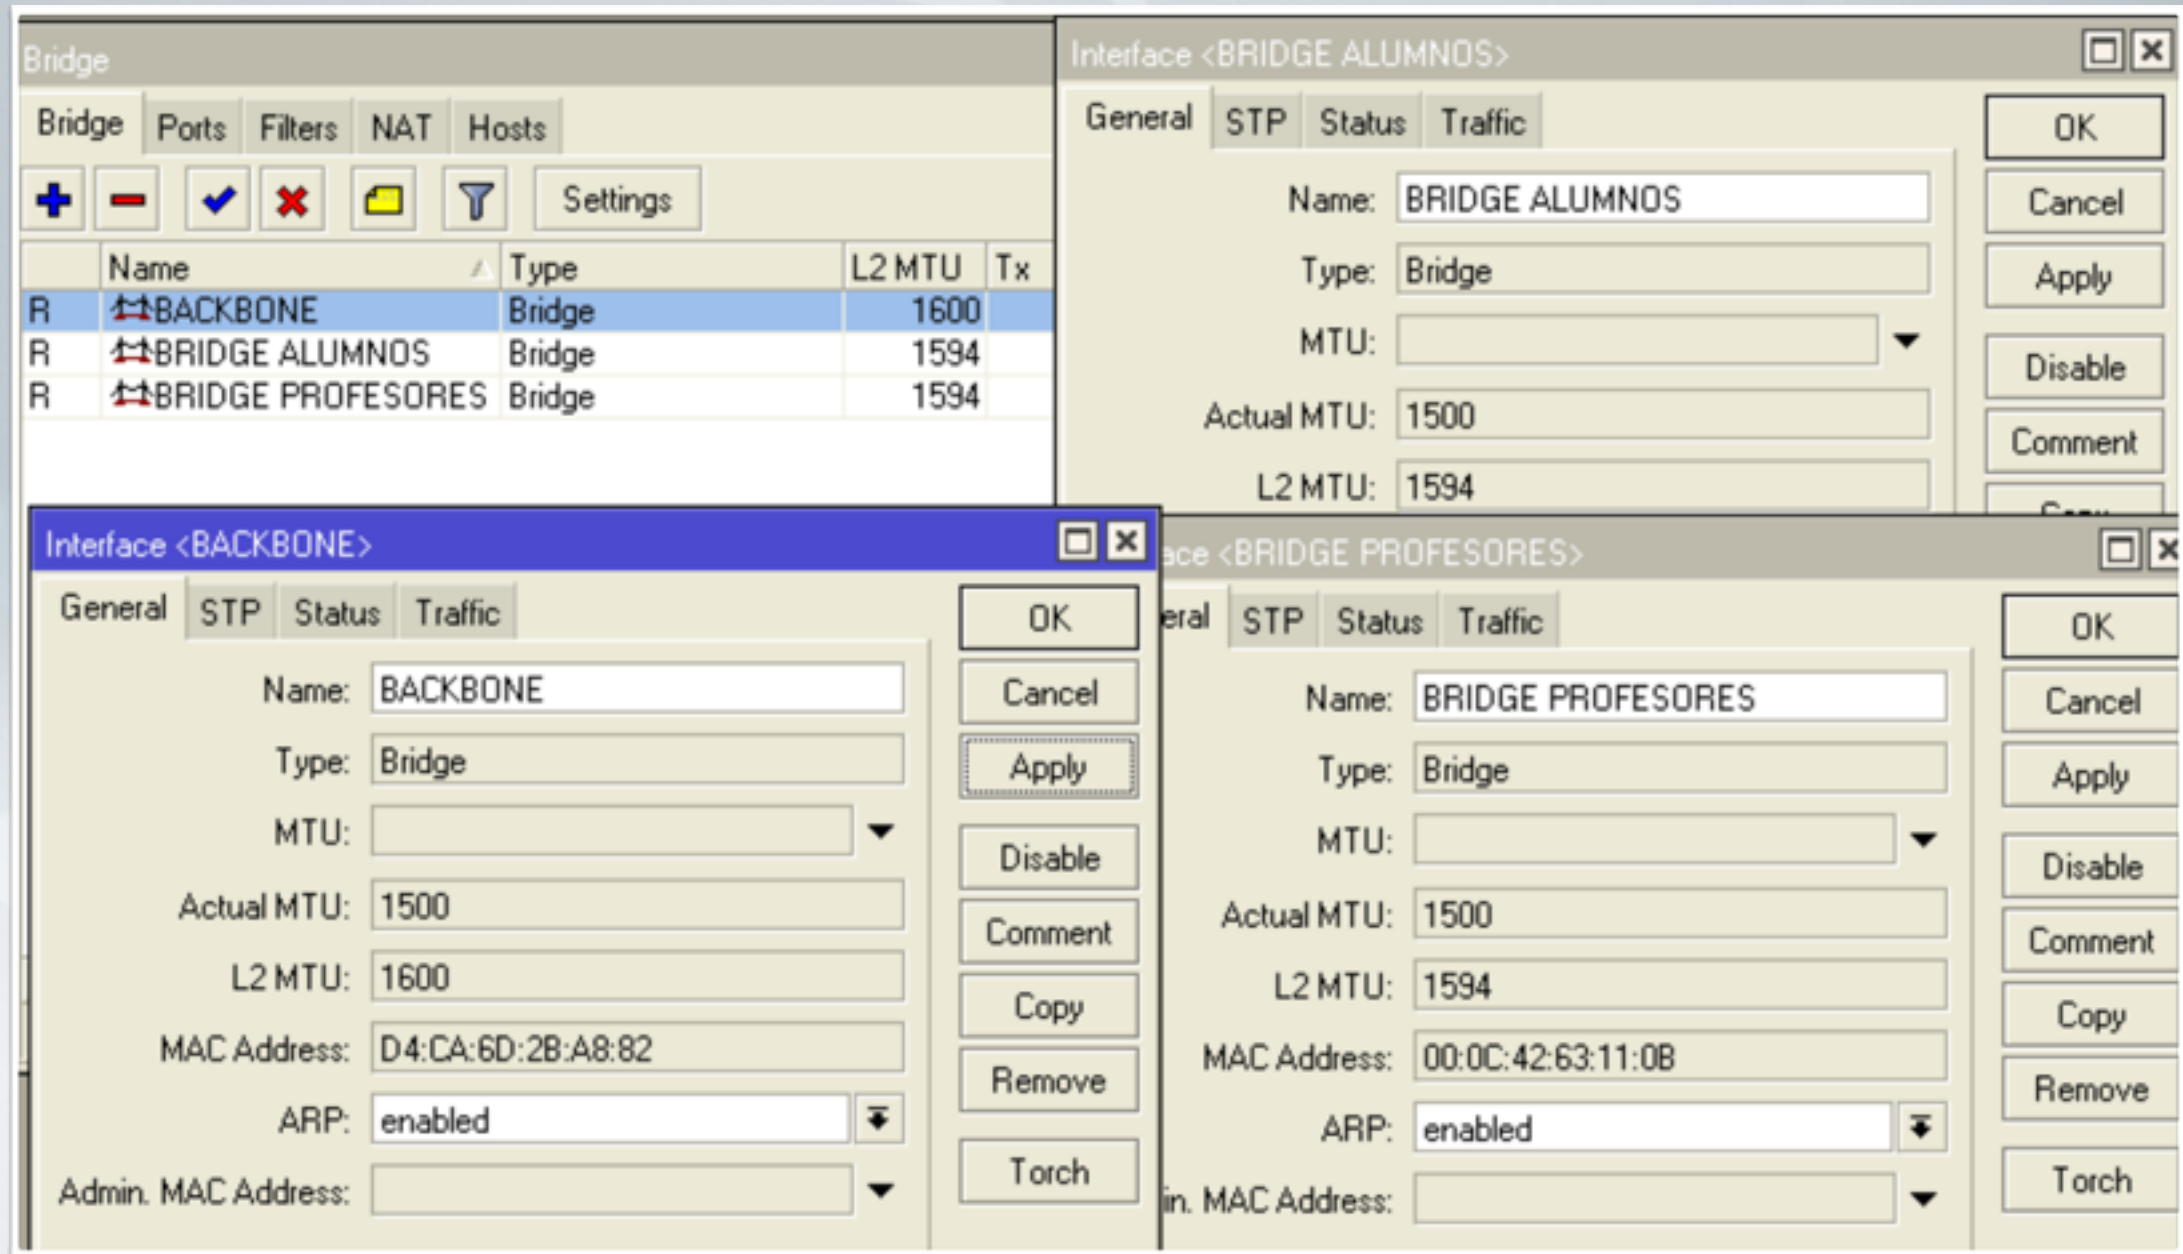

- Activarles *RSTP*

CONFIGURACION CAPsMAN

✓ Configurar Red Wireless como *AP Bridge* y *WDS*

The image displays two screenshots of the MikroTik WinBox configuration interface, specifically the 'Interface' configuration windows for 'wlan1 mesh' and 'wlan1'.

Top Screenshot: Interface <wlan1 mesh>

- General Tab:** Mode: ap bridge, Band: 5GHz-A, Channel Width: 20MHz, Frequency: auto MHz, SSID: MESH, Scan List: default, Wireless Protocol: unspecified, Security Profile: mesh, WPS Mode: push button, Antenna Mode: antenna a, Bridge Mode: enabled.
- Wireless Tab:** (Empty)
- WDS Tab:** (Empty)
- Nstreme Tab:** (Empty)
- Status Tab:** (Empty)
- Traffic Tab:** (Empty)
- Buttons:** OK, Cancel, Apply, Disable, Comment.


Bottom Screenshot: Interface <wlan1>

- Wireless Tab:** (Empty)
- HT Tab:** (Empty)
- WDS Tab:** WDS Mode: dynamic mesh, WDS Default Bridge: BACKBONE, ☐ WDS Ignore SSID.
- Nstreme Tab:** (Empty)
- NV2 Tab:** (Empty)
- Status Tab:** (Empty)
- Traffic Tab:** (Empty)

Red dashed circles highlight the 'ap bridge' mode in the top window and the 'dynamic mesh' WDS mode in the bottom window.

CONFIGURACION CAPsMAN

✓ Activar *CAPsMAN* y crear *Configuraciones*

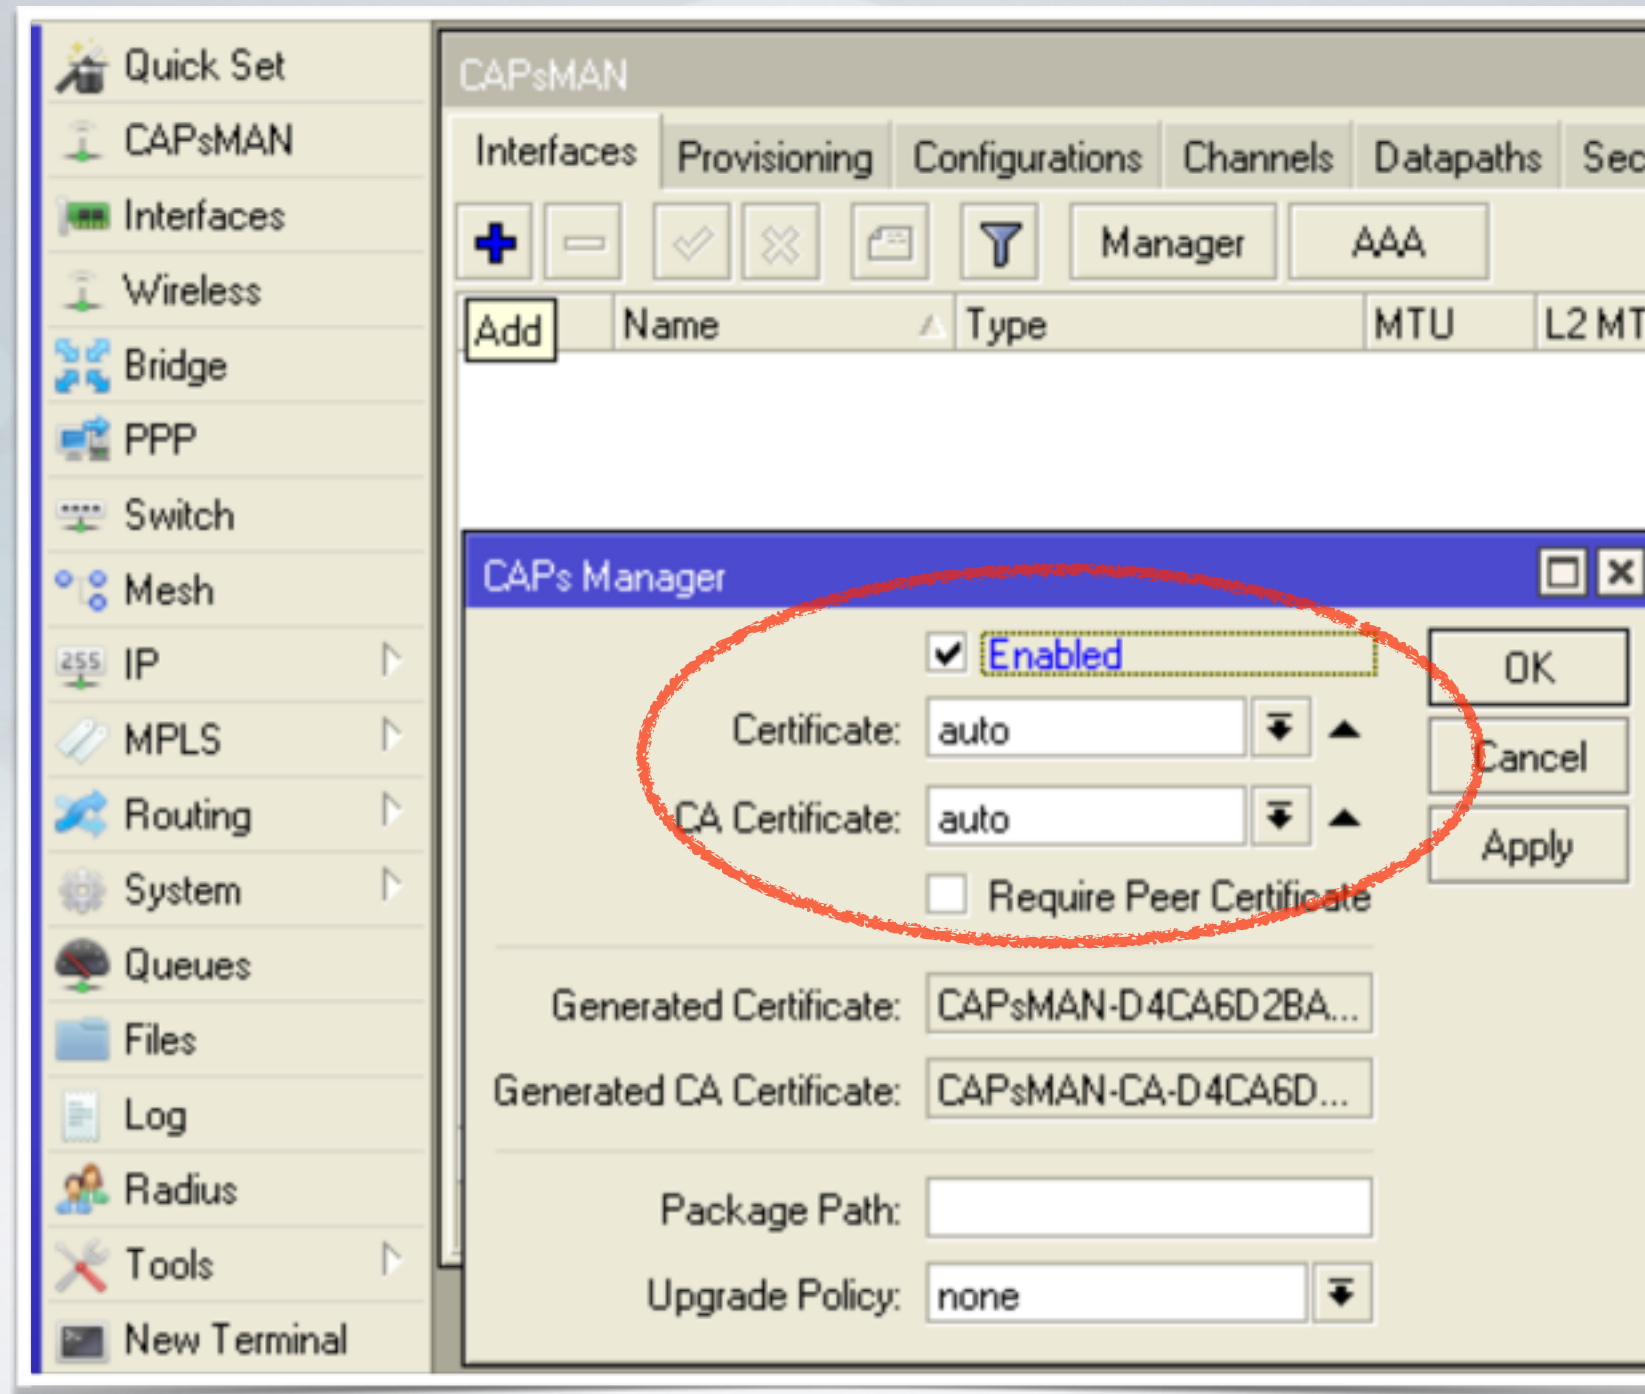

CONFIGURACION CAPsMAN

✓ Activar *CAPsMAN* y crear *Configuraciones*

CAPsMAN

Interfaces Provisioning Configurations Channels Datapaths Security Cfg. Access List Remote CAP Radio Registration Table

+ - [Folder Icon] [Filter Icon]

Name	SSID	Hide SSID	Load Bal...	Country	Channel	Frequency	Band	Datapath	Bridge
Config ALUMNOS	ALUMNOS								BRIDGE ALUMNOS
Config PROFESO...	PROFESORES				CANAL 1				BRIDGE PROFESORES

CAPs Configuration <Config ALUMNOS>

Wireless Channel Datapath Security

Name: Config ALUMNOS

Mode: ap

SSID: ALUMNOS

Hide SSID:

CAPs Configuration <Config ALUMNOS>

Wireless Channel Datapath Security

Datapath:

Bridge: BRIDGE ALUMNOS

CAPs Configuration <Config PROFESORES>

Wireless Channel Datapath Security

Name: Config PROFESORES

Mode: ap

SSID: PROFESORES

CAPs Configuration <Config PROFESORES>

Wireless Channel Datapath Security

Datapath:

Bridge: BRIDGE PROFESORES

CAPs Configuration <Config PROFESORES>

Wireless Channel Datapath Security

Security: PROFESORES SEGURIDAD

CONFIGURACION CAPsMAN

✓ Crear Aprovisionamiento

CAPsMAN

Interfaces Provisioning Configurations Channels Datapaths Security Cfg. Access List Remote CAP Radio Registration Ta

+ - ✓ ✗ 📁 🔍

#	Radio MAC	Identity Regexp	Common Nam...	Action	Master Configurati...	Slave Configuration
0	00:00:00:00:00:00			create dy...	Config PROFESO...	Config ALUMNOS

1 item

CAPs Provisioning <00:00:00:00:00:00>

Radio MAC: 00:00:00:00:00:00

OK

Cancel

Apply

Disable

Comment

Copy

Remove

Hardware Supported Modes:

Identity Regexp:

Common Name Regexp:

IP Address Ranges:

Action: create dynamic enabled

Master Configuration: Config PROFESORES

Slave Configuration: Config ALUMNOS

Name Format: cap

Name Prefix:

CONFIGURACION CAPsMAN

✓ Crear **VLANs** y agregarlas al **Bridge** correspondiente

The screenshot displays the Mikrotik WinBox interface. At the top, the 'Bridge' window is open, showing a table of bridges and their associated ports. Below it, two configuration windows for VLANs are open: 'Interface <vlan.20 PROFESORES>' and 'Interface <vlan.10 ALUMNOS>'. Both windows show the 'General' tab with fields for Name, Type, MTU, L2 MTU, MAC Address, ARP, VLAN ID, and Interface.

Interface	Bridge	Priority (h...)	Path Cost	Horizon	Role
DI cap6	BRIDGE PROFESORES	80	10		disabled port
DI cap7	BRIDGE ALUMNOS	80	10		disabled port
DI vlan.10 ALUMNOS	BRIDGE ALUMNOS	80	10		designated port
DI vlan.20 PROFESORES	BRIDGE PROFESORES	80	10		designated port
D wds83	BACKBONE	80	74		root port

Interface <vlan.20 PROFESORES>

General | Status | Traffic

Name: vlan.20 PROFESORES

Type: VLAN

MTU: 1500

L2 MTU: 1594

MAC Address: D4:CA:6D:2B:A8:81

ARP: enabled

VLAN ID: 20

Interface: ether5

☐ Use Service Tag

Interface <vlan.10 ALUMNOS>

General | Status | Traffic

Name: vlan.10 ALUMNOS

Type: VLAN

MTU: 1500

L2 MTU: 1594

MAC Address: D4:CA:6D:2B:A8:81

ARP: enabled

VLAN ID: 10

Interface: ether5

☐ Use Service Tag

CONFIGURACION CAPS

CONFIGURACION CAPs

✓ Crear **Bridge** y agregar la interface wlan **Backbone**

The screenshot displays the Mikrotik WinBox interface for configuring a Bridge. The left sidebar shows the navigation menu with options: Quick Set, CAPsMAN, Interfaces, Wireless, Bridge, PPP, Switch, and Mesh. The main window is titled 'Bridge' and has tabs for Bridge, Ports, Filters, NAT, and Hosts. The 'Bridge' tab is active, showing a table with one entry:

	Name	Type
R	BRIDGE BACKBONE	Bridge

An inset window shows the 'Ports' tab, which lists the interfaces connected to the bridge:

	Interface	Bridge	Priority (h...)	Path Cost
	wlan1 mesh	BRIDGE BACKBONE	80	10
D	wds6	BRIDGE BACKBONE	80	101

CONFIGURACION CAPs

- ✓ Configurar la interface wlan **Backbone** y agregarla al **bridge**

Interface <wlan1>

General Wireless **WDS** Nstreme Status Traffic

Mode: wds slave

Band: 5GHz-A

Channel Width: 20MHz

Frequency: auto MHz

SSID: MESH

Scan List: default

Wireless Protocol: unspecified

Security Profile: mesh

WPS Mode: push button

Antenna Mode: antenna a

Bridge Mode: enabled

OK Cancel Apply Disable Comment

Interface <wlan1 mesh>

General Wireless **WDS** Nstreme Status Traffic


WDS Mode: dynamic mesh

WDS Default Bridge: BRIDGE BACKBONE

☐ WDS Ignore SSID

CONFIGURACION CAPs

✓ Activar *CAP* y configurar *Interfaces*

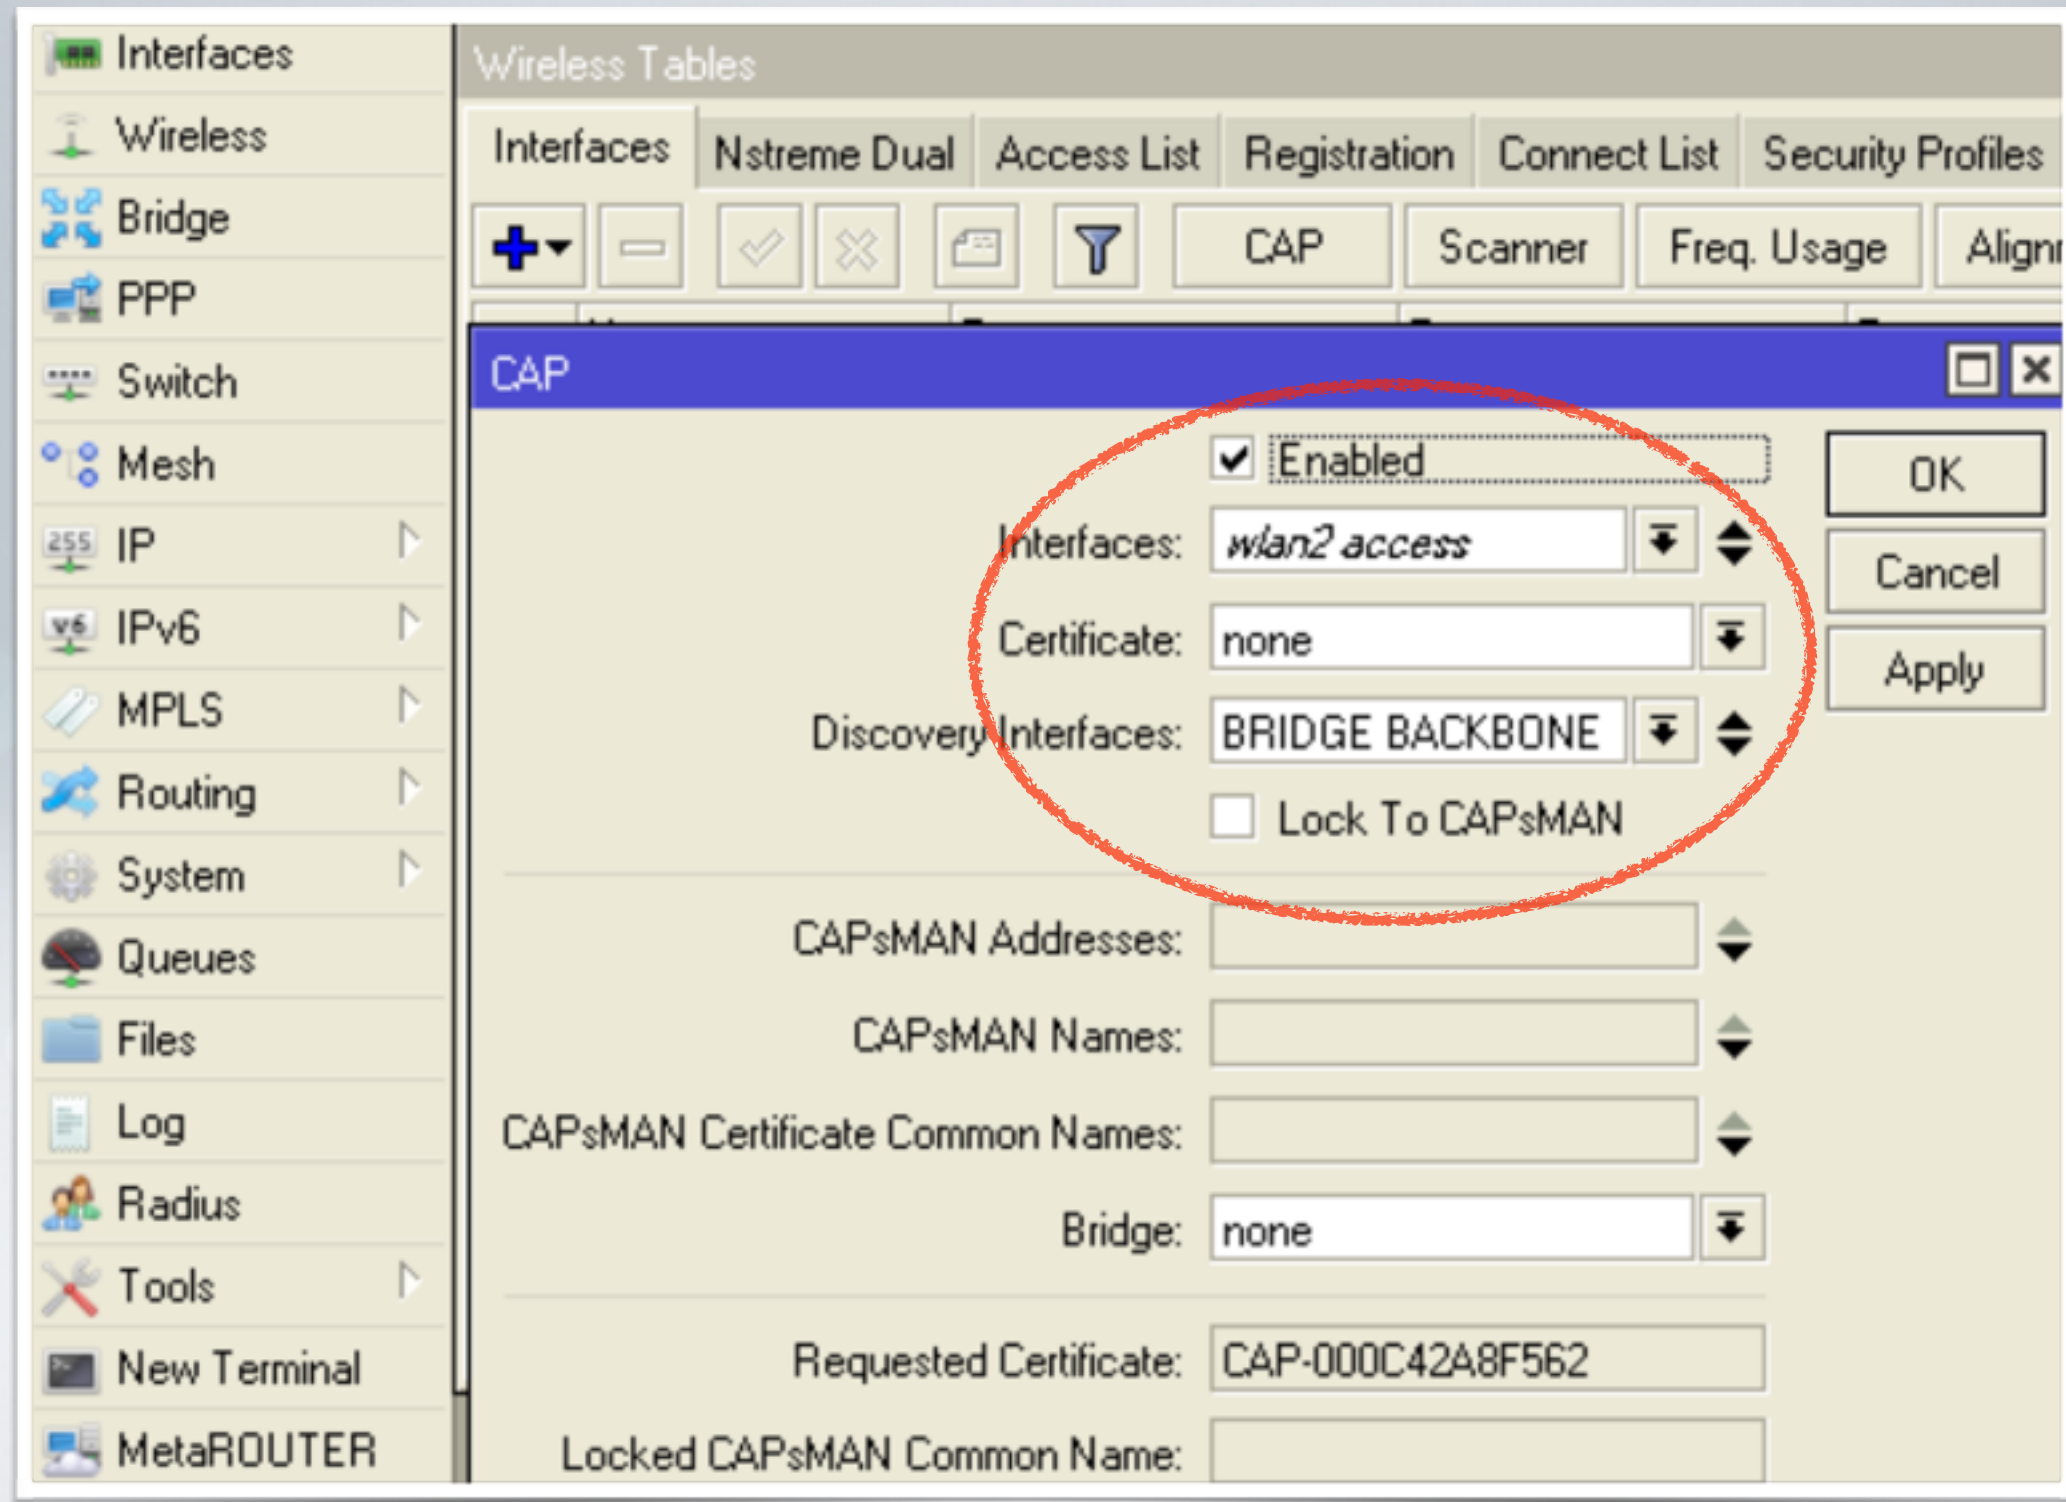

The screenshot shows the MikroTik WinBox interface with the 'Wireless Tables' tab selected. The 'CAP' configuration window is open, and the 'Enabled' checkbox is checked. The 'Interfaces' dropdown is set to 'wlan2 access', and the 'Discovery Interfaces' dropdown is set to 'BRIDGE BACKBONE'. A red circle highlights the 'Enabled' checkbox and the 'Interfaces' and 'Discovery Interfaces' dropdowns.

Wireless Tables

Interfaces | Nstreme Dual | Access List | Registration | Connect List | Security Profiles

+ - ✓ ✗ CAP Scanner Freq. Usage Align

CAP

☒ Enabled

Interfaces: wlan2 access

Certificate: none

Discovery Interfaces: BRIDGE BACKBONE

☐ Lock To CAPsMAN

CAPsMAN Addresses:

CAPsMAN Names:

CAPsMAN Certificate Common Names:

Bridge: none

Requested Certificate: CAP-000C42A8F562

Locked CAPsMAN Common Name:

OK

Cancel


Apply

CONFIGURACION CAPs

- ✓ Se espera conexión al CAPsMAN y el aprovisionamiento

Wireless Tables						
Interfaces						
Nstreme Dual Access List Registration Connect List Security Profiles Channels						
+ - ✓ ✗ [Icon] CAP Scanner Freq. Usage Alignment Wireless Sniffer Wireless Snooper						
	Name	Type	Tx	Rx	Tx Packet (p/s)	Rx Packet (p/s)
RS	wlan1 mesh	Wireless (Atheros AR5...	112.0 kbps	4.2 kbps	11	
DRS	wds6	WDS	111.6 kbps	4.2 kbps	10	
--- managed by CAPsMAN						
--- channel: 2447/20/g(30dBm), SSID: PROFESORES, CAPsMAN forwarding						
X	wlan2 access	Wireless (Atheros AR5...	0 bps	0 bps	0	
--- managed by CAPsMAN						
--- SSID: ALUMNOS, CAPsMAN forwarding						
DX	wlan25	Virtual AP	0 bps	0 bps	0	

CAPsMAN

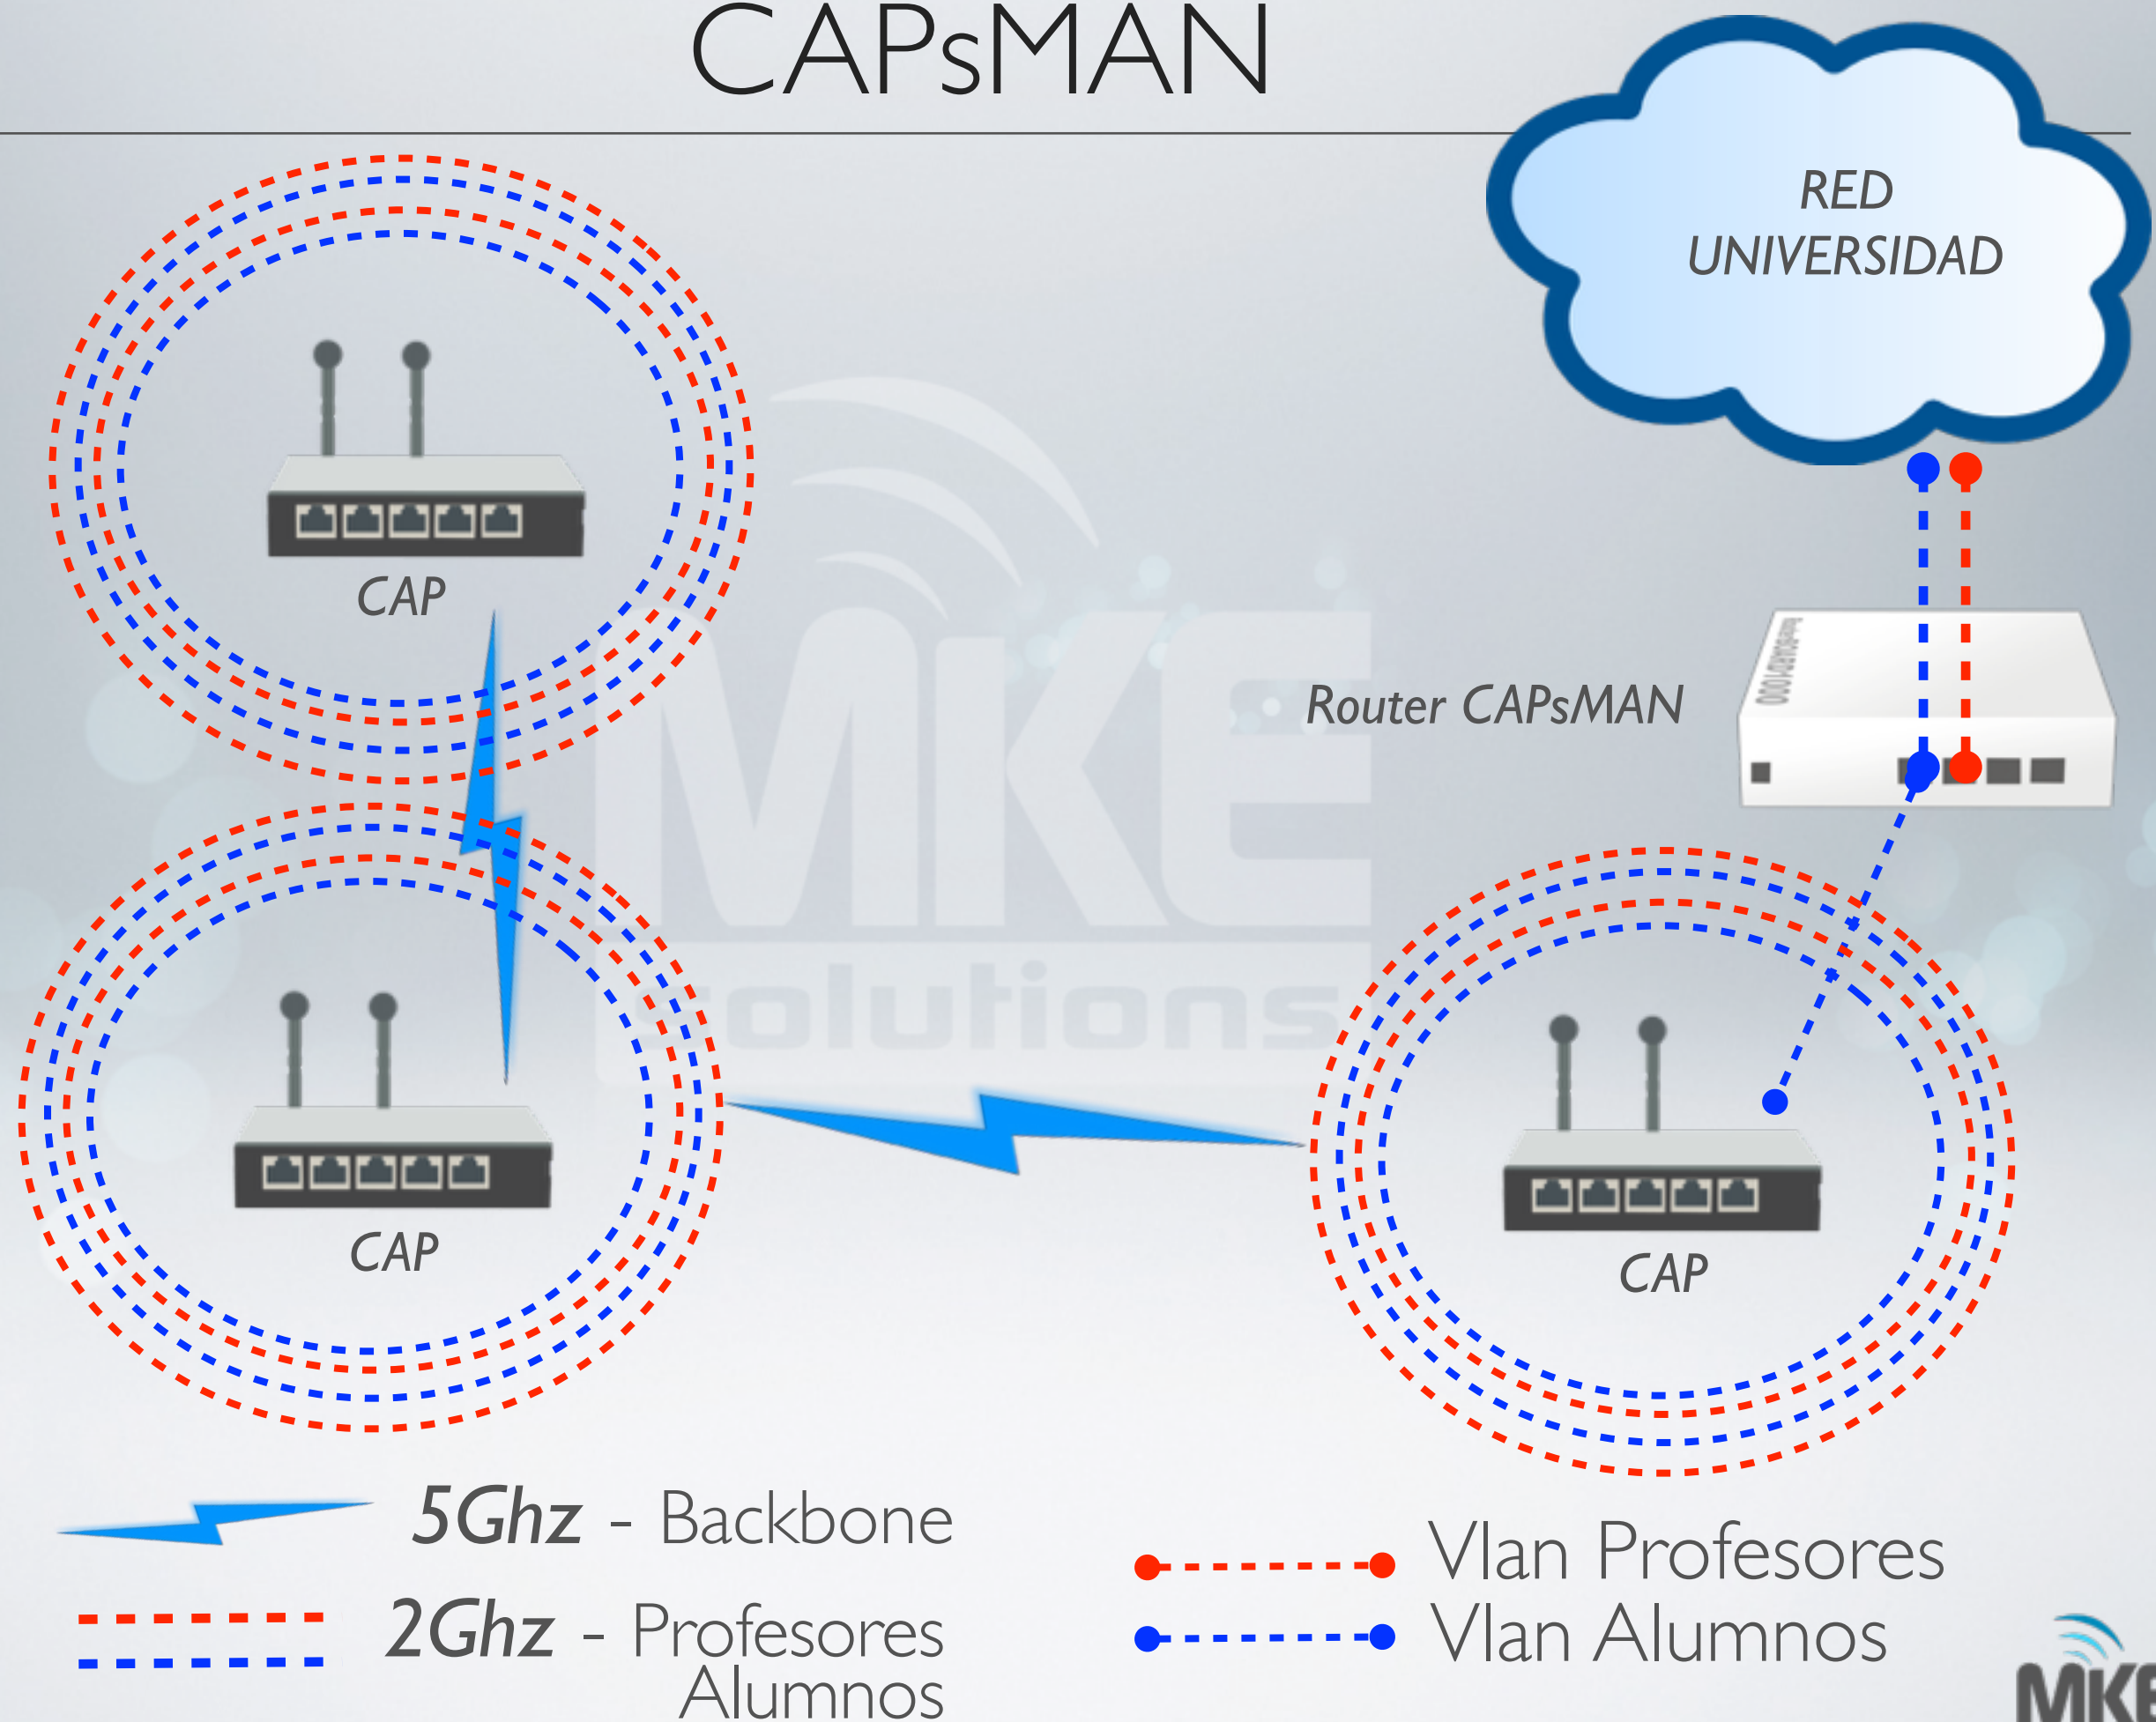

MONITOREO DE CONEXIONES

✓ Monitoreo centralizado

CAPsMAN										
Interfaces Provisioning Configurations Channels Datapaths Security Cfg. Access List Remote CAP Radio Registration Table										
Interface	SSID	MAC Address	Tx Rate	Rx Rate	Tx Signal	Rx Signal	Uptime	Tx/Rx Packets	Tx/Rx Bytes	
cap113	MKE-Max-2	00:25:56:BC:CA:9D	54Mbps	48Mbps	0	-57	01:40:37.70	72 976/64 513	40.1 MiB/12.0 MiB	
cap113	MKE-Max-2	F8:CF:C5:7D:83:8B	11Mbps	11Mbps	0	-74	01:32:16.75	12 057/7 630	13.8 MiB/827.7 KiB	
cap113	MKE-Max-2	00:1C:BF:00:29:F8	48Mbps	54Mbps	0	-66	00:42:38.20	57 275/43 439	59.1 MiB/5.1 MiB	
cap116	MKE-Max	2C:41:38:2D:74:F6	1Mbps	52Mbps-20MHz/15	0	-79	01:40:38	1/49	42 B/27.9 KiB	
cap116	MKE-Max	48:5D:60:1D:DF:2A	216Mbps-40MHz/25	13.5Mbps-40MHz/15	0	-61	01:40:36.88	3 845/3 830	565.3 KiB/453.4 KiB	
cap116	MKE-Max	D4:CA:6D:30:C3:C3	135Mbps-40MHz/15	135Mbps-40MHz/15	-41	-57	01:40:35.34	3 629/5 003	1147.3 KiB/981.4 KiB	
cap116	MKE-Max	80:22:75:1C:C1:BF	54Mbps	39Mbps-20MHz/15						
cap116	MKE-Max	5C:B5:24:EC:B1:F8	5.5Mbps	58.5Mbps-20MHz/15						
cap116	MKE-Max	CC:29:F5:5F:C7:ED	52Mbps-20MHz/15	19.5Mbps-20MHz/15						
cap116	MKE-Max	CC:FA:00:EE:6E:F9	48Mbps	1Mbps						
cap27	MKE-Max-5	14:10:9F:D5:7B:05	270Mbps-40MHz/25	216Mbps-40MHz/25						
cap27	MKE-Max-5	14:10:9F:D3:C0:93	243Mbps-40MHz/25	135Mbps-40MHz/15						

Bridge

Bridge Ports Filters NAT Hosts



	Interface	Bridge	Priority (...)	Path Cost	Horizon	Role
D	 cap113	local_lan	80	10		designated port
DI	 cap114	RED GUEST	80	10		disabled port
DI	 cap115	RED TRAINING	80	10		disabled port
D	 cap116	local_lan	80	10		designated port
D	 cap27	local_lan	80	10		designated port
DI	 cap28	RED GUEST	80	10		disabled port
DI	 cap29	RED TRAINING	80	10		disabled port
	 ether2	local_lan	80	10		designated port
	 ether3	dmz_bridge	80	10		designated port
;;; GSM						
	 ether4	dmz_bridge	80	10		designated port
;;; ATA VOIP						
	 ether7	local_lan	80	10		designated port

CAPsMAN							
Interfaces Provisioning Configurations Channels Datapaths Security Cfg. Access List Remote CAP Radio Regis							
+ - ✓ ✕ Manager AAA							
Name	Type	MTU	L2 MTU	Tx	Rx		
DRSMB cap27	Interfaces	1500	1600	485.0 kbps	69.9 kbps		
DSB cap28	Interfaces	1500	1600	0 bps	0 bps		
DSB cap29	Interfaces	1500	1600	0 bps	0 bps		
DRSMB cap113	Interfaces	1500	1600	133.9 kbps	10.1 kbps		
DSB cap114	Interfaces	1500	1600	0 bps	0 bps		
DSB cap115	Interfaces	1500	1600	0 bps	0 bps		
DRSB cap116	Interfaces	1500	1600	1176 bps	4.4 kbps		

RECOMENDACIONES FINALES

- ✓ Usar paquete *wireless-cm2*
- ✓ Hacer aprovisionamientos personalizados
- ✓ Hacer reglas de filtrado por niveles de señal
- ✓ Activar **WMM** en toda la red Wireless
- ✓ Hacer filtrado *netbios / smb* en *firewall bridge*
- ✓ Colocar protección de **DHCP intrusos**
y *alertas* al detectarlos



REFERENCIAS

Enlaces y Documentaciones:

✓ MikroTik RouterOS Wiki

- Manual CAPsMAN

✓ MikroTik User Meeting MUM

- CAPsMAN - Uldis (India 2015)
- Redes MESH - Maia (Brasil 2008)
- Redes MESH para Universidad: Maxi (Bolivia 2014)

✓ MKE Solutions

- <http://www.mkesolutions.net>
- <http://www.AcademiaDeEntrenamientos.com>



¿PREGUNTAS?

Muchas Gracias!

- ▶ info@mkesolutions.net
- ▶ <http://www.mkesolutions.net>
- ▶ <http://www.AcademiaDeEntrenamientos.com>
- ▶ <http://maxid.com.ar>
- ▶ <http://twitter.com/mdobladez>



Academia[®]
DE ENTRENAMIENTOS